


Instruction for use Multi-Cleaner "Hydrobroom" BR-850

I. Safety instructions

1. Read the instructions before using for the first time.
2. Never point the Multi-Cleaner cleaning jet at people, animals or electric appliances.
3. Do not put your hand into the high-pressure jet.
4. Make sure that children (or minors) are not using the appliance or are not in the proximity of the area being worked on.
5. Protect the appliance from frost.

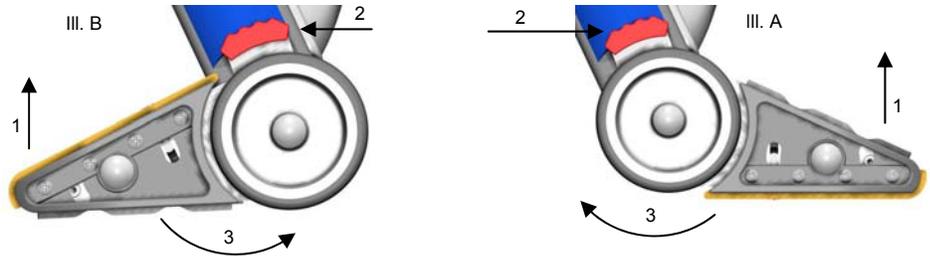


II. Starting the appliance

1. Switch on high pressure cleaner and with the spray gun open, flush through without the lance.
2. Connect high-pressure lance or spray gun by turning or clicking.
3. Attach the Multi-Cleaner and (as with a vacuum cleaner) go, depending on the amount of dirt, slowly or quickly over the area.
4. Do not leave the Multi-Cleaner at one point for too long, but guide it evenly over the surface being cleaned and repeat this movement as you would with a vacuum cleaner. In this way as with sensitive surfaces such as wood, you have constant control over the results of your work.
5. The protective cover rotates by 270° so that it can clean corners, edges, front surfaces etc without spraying. The "Blow-Away-Cover" (Position B) should be opened when working with large pieces of dirt but it should, however, be closed when spray protection is necessary. When cleaning corners swing the protective cover slightly backwards and at an angle of 45° lift it slightly from the corner and then reposition it again as before. With front surfaces such as with steps or walls the protective cover should be positioned at 90° in order to reduce the spraying. To swivel back (III. A) first lift the protective cover slightly in the direction of arrow (1), then press the lever in the direction of the arrow (2) and hold it down until it clicks. Then swivel the protective cover back completely until it clicks (3). In order to swivel it forwards (III. B) first move the protective cover slightly back (1) and then press the lever in the direction of the arrow (2) and at the same time swivel the protective cover forwards (3).
6. In order to clean surfaces which are inaccessible or (open areas) you can remove the flat rotation nozzle from the Multi-Cleaner with the Quick-Snap function (Position C) and so having more free movement. (In order to remove the nozzle, the two red flaps must be pressed simultaneously).
7. Apart from the above mentioned areas it is also possible to use the BR-850 on hard floors, tiled floors and all surfaces which can be cleaned with brushes whereby the high-pressure jet takes off and removes the course dirt and at the same time the roller brush gets rid of the dirty film. When working with very stubborn dirt it is advantageous to leave the surface to dry after the first cleaning phase and before the second cleaning phase treat the surface with the high pressure cleaning chemical system.
8. After this it is very efficient to go over the surface with the BR-850 as the brushes cover the prepared areas properly.
9. When cleaning rough surfaces such as interlocking paving stones etc. the brush should be removed, so that it does not get spoilt, and can be used again for hard surfaces. So you will increase the roller brush's life span.
10. In order to activate the cleaning system set the switch (position D) to the right for half or full suction.

Function:

The oscillating jet hits as usual the cleaning area and the brush works as a result of the deflecting jet. With a stronger angle of the nozzle casing the oscillating jet sprays increasingly more directly onto the brush and as such the cleaning brush dominates.

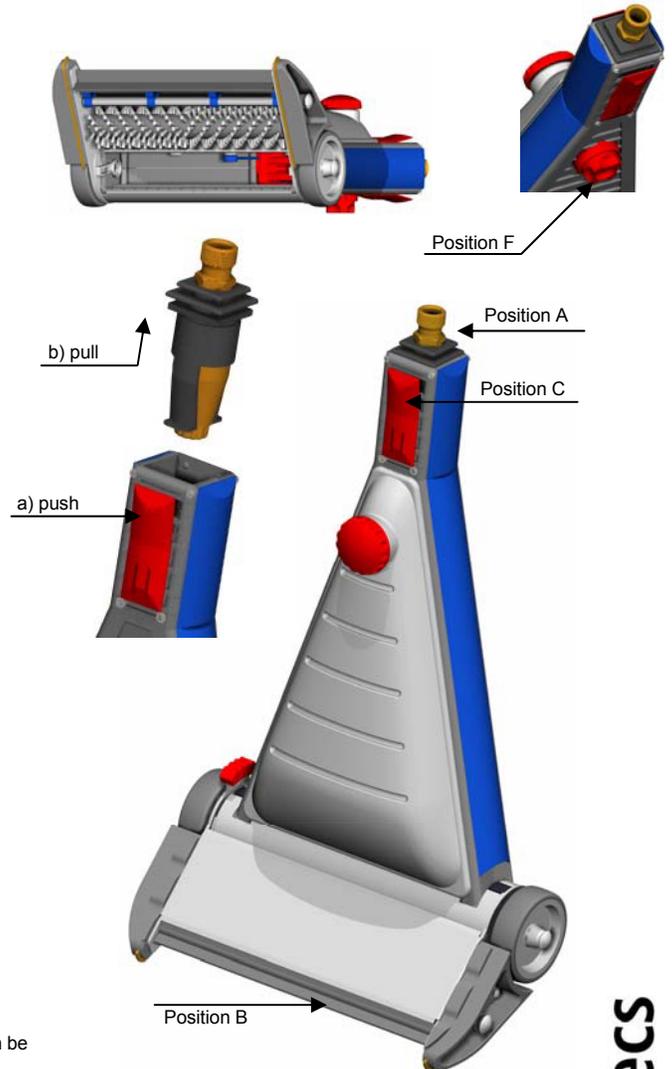

!! Beware!! Very strong jet steams. Please read the safety instructions above.
Please use only thin liquid detergents.

Technical Data:

Typ BR-850 ceramic nozzle max press: 210 bar temperature: 90 °C 18 l/min

Care and Maintenance:

The Multi-Cleaner should be cleaned when cleaning phase is ended. The main nozzle can be pulled off with the Quick-Snap-System and the large pieces of dirt can be removed by flushing the case through thoroughly. (external and internal)

Warning:

Do not clean the case on its head with the main nozzle attached, as the dirt would then flush into the nozzle.

Defects:

High pressure cleaner pulsates.
High-pressure cleaner pulsates after a few minutes:

Nozzle does not move:

Main nozzle is too small.
Main nozzle, or coupling filter (Position A) is dirty.
Main nozzle is dirty.

Hofackergasse 3
D-89250 Senden - Hittistetten

Tel. +49 (0)7307 – 9265 0
Fax +49 (0)7303 – 9265 20
E-Mail: info@cleantecs.de
www.cleantecs.de

Cleantecs